


# SR110 Digital Satellite Receiver

## Basic Operational Instructions

The remote control opposite is easy to operate – when you know how!

Below are just the basic functions – but there are more!

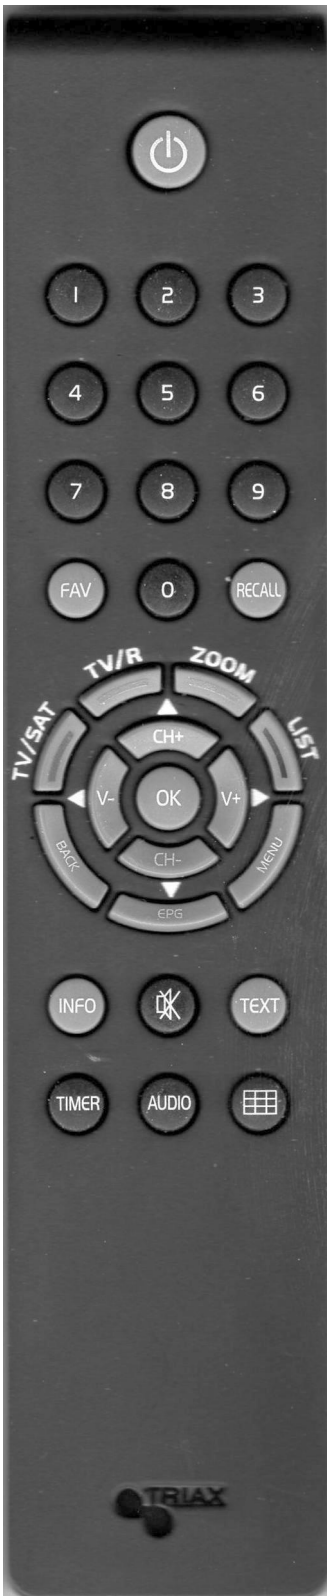

- 1) On/Off button.** Located at the TOP centre.
- 2) Changing channels.** Press the OK button in the centre ring once quickly (don't hold it in!) and the channel menu will appear. By pressing the CH+ or CH- buttons you can scroll through the channels UP & DOWN. To scroll or page ACROSS the channel menu press the V+ or V- buttons. (Again, press any button quickly and don't hold them in!). You will notice by SLOWLY scrolling either ACROSS or UP & DOWN you can view each channel LIVE on the small picture. Once you've selected what you wish to watch simply PRESS the OK button TWICE.
- 3) Favourites.** Access the Favourites list by pressing the **FAV button** (on left below the No.7 button). Scrolling UP & DOWN to various channels by pressing the CH+ or CH- buttons. To access CATEGORIES (News, Movies, etc.,) press the VOL (V+ & V-) either right or left. Also, from the *small* FAV menu you can access ALL channels by pressing on button No.1
- 4) Volume control.** Once you're watching any channel on a full screen the V+ & V- buttons then control the VOLUME (you may need to increase the TV's volume by its remote control).
- 5) Adding channels to Favourites.** Press the **OK** button in the centre ring once quickly (don't hold it in!) and the channel menu will appear. Notice at the bottom there is a **MENU**. To add channels to Favourites simply select a channel you wish to save in Favourites and press the **1 button** (top left) on the digital pad and an icon will appear next to the channel. Keep scrolling **UP & DOWN** or **ACROSS** as explained in (2) above adding channels as you go by pressing the **No.1** button on the numeric pad. When you've completed all your Favourites simply press the **BACK** button (located on the outer ring on left at 8:00 o'clock) and click OK. This will save your Favourites.
- 6) Electronic Programme Guide (EPG).** Press the EPG button located in the outer ring at 6:00 o'clock. To view more details press the No.2 button on the numeric pad. To escape, press BACK.
- 7) Radio channels.** To access press the **GREEN** button **TV/R** on the outer ring and using the same methods as above scroll around to the stations you wish to listen to.

**NOTE:** If you get stuck on **any** menu or function PRESS the **BACK** button to escape!

**Updating channels.** This action should be done every month or so or when a channel might have 'disappeared' or changed frequency. Simply go to MENU (pass is 0000) and scroll down to Installation (Satellite Symbol) click OK and scroll down to Auto Update and click OK (make sure you're in FTA or Free mode). Add any new channels to Favourites.

The SR110 provides MORE than just FreeSat – it offers TV & Radio channels from all four satellites (Eurobird/Astra) at 28° east.